



For **KX9500** and **KX9500S** Winches Remove top cover by removing 6 Philip screws. There are 3 screws in the front and 3 screws in the back side.





For **KX9500E**, **KX9500ES** and **KX9500EH** Winches Remove top cover by removing 4 Philip screws. There are 2 screws in the front top and 2 screws in the back top.



You only need to replace the antenna

